



APPLICATION NOTE AN2011

FAN CONTROL FOR HEATING AND AIR CONDITIONING

P.O. Box 2956 · Syracuse · New York · 13220
Phone: (315) 433-1150 Fax: (315) 433-1521
Toll Free US & Canada (800) 334-0837
Email: sales@infitec.com

email: sales@infitec.com
engineering@infitec.com

FAN CONTROL FOR HEATING AND AIR CONDITIONING

Input voltage is applied at all times. When the thermostat closes, the compressor starts and the Delay On begins. Upon completion of the Delay On the fan starts. When the thermostat opens, the compressor stops, and the Delay Off begins. Upon the completion of the Delay Off the fan stops.

